



Self-cleaning

1.

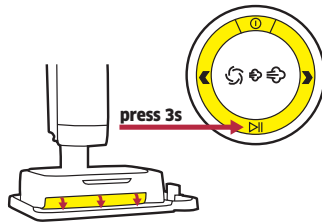


Start self cleaning mode,
while SCV 4 Steam Vac
is on its station

2.

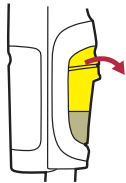


After self cleaning mode
remove the dirt water tank

3.

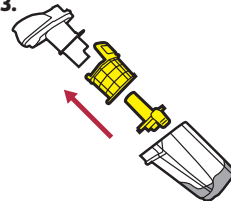

Disassemble the tank

4.

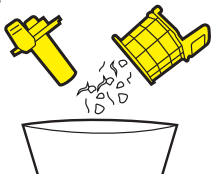

Empty the coarse dirt from
the sieve into the trash can

5.




Empty the dirt water tank


SCV4 STEAM VAC QUICKSTART GUIDE




First Steps

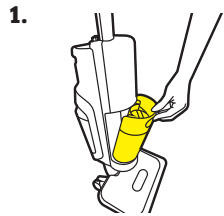


Remove fresh water tank

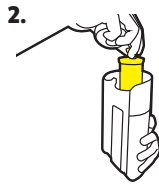

Install the descaling cartridge

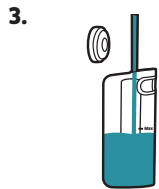


Fill fresh tank until max. with fresh water

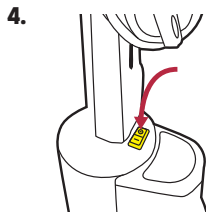

Turn the main switch on

5. a. Press + 30s heat up time

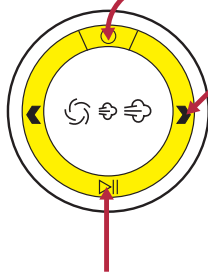

c. Select mode

b. Modes


Vacuuming

Powerful steam


Vacuuming + powerful steam

Vacuuming + sensitive steam


Roller

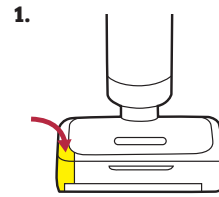


To swap roller press and pull out suction channel

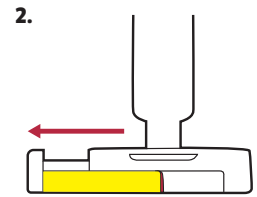

Pull to the left

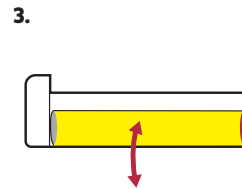

Grey side on the left, Pink side on the right

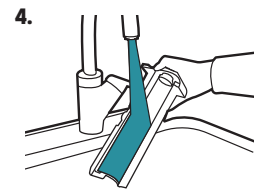

After cleaning, rinse under the tap



app support



Download the Home & Garden App for full support in cleaning